


LifeFitness

Arctic Silver 95TW Treadmill

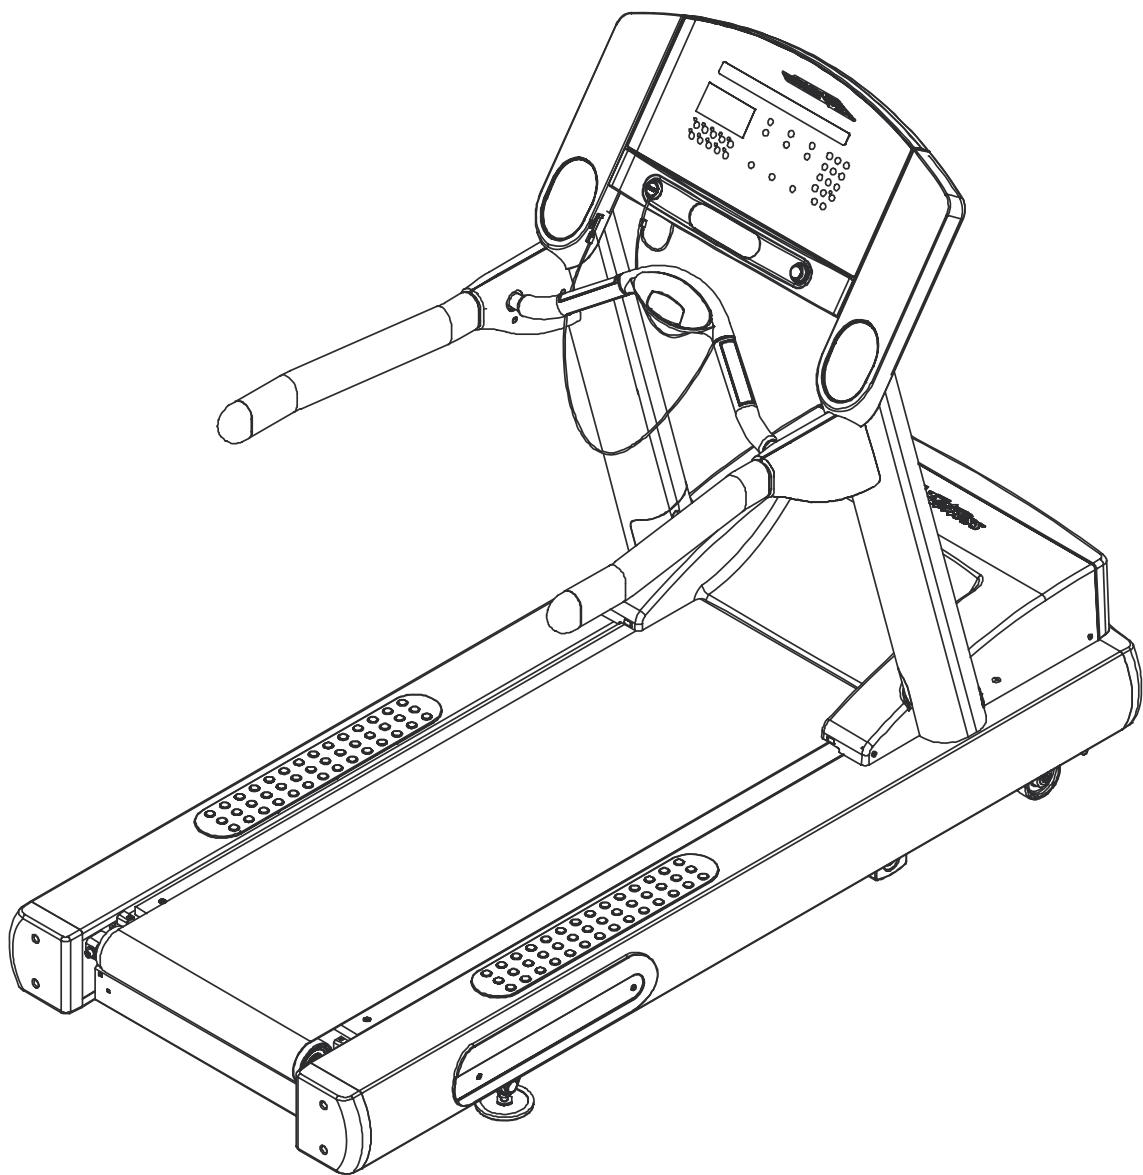


Customer Support Services
PARTS MANUAL

rev 03 Jul 2008

| | |
|--|---|
| OPERATION MANUAL | M051-00K58-A177 |
| SERVICE MANUAL | M051-00K58-A159 |
| ACCESS PLATE ASSEMBLY CONSISTS OF: 1) CONNECTOR PLATE 2) F TYPE CONNECTOR | AK58-00329-0000 0K58-01392-0000 0017-00021-2846 |
| COAX CABLE | AK32-00020-0002 |
| POWER CABLE | AK32-00078-0001 |
| HARDWARE BAG | AK58-00226-0000 |
| TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN | 0017-00008-0204 0017-00008-0205 0017-00008-0206 |
| INSTALLATION VIDEO | M051-00K58-A160 |
| SERVICE VIDEO | M051-00K58-A161 |

**NOTE: ADDING THE LCD BOLT-ON SCREEN TO THE
95TW-0XXX-03 MAKES THE UNIT A 95TER-0XXX-03.**

| | Page |
|---|------|
| REAR ENDCAPS AND CUP HOLDERS | 4 |
| SCUFF PAD, TINSEL AND FRAME TAG BOARD | 5 |
| CONSOLE AND RELATED COMPONENTS..... | 6 |
| UPRIGHTS, HANDRAILS AND ERGO BAR | 7 |
| MOTOR COVER, FRONT COVER AND ENDCAPS | 8 |
| BELT, DECK AND REAR ROLLER..... | 9 |
| LIFT FRAME AND MOTOR | 10 |
| WAX/LIFT ASSEMBLY | 11 |
| MOTOR CONTROLLER ASSEMBLY..... | 12 |
| DRIVE MOTOR ASSEMBLY | 13 |
| IDLER ARM ASSEMBLY AND STATIC BRUSH..... | 14 |
| LEG LEVELER ASSEMBLY..... | 15 |
| FRONT ROLLER ASSEMBLY..... | 16 |
| ERGO BAR WITH LIFEPULSE..... | 17 |
| POWER COMPONENTS SCHEMATIC 1 | 18 |
| POWER COMPONENTS SCHEMATIC 2 | 19 |
| CABLES..... | 20 |

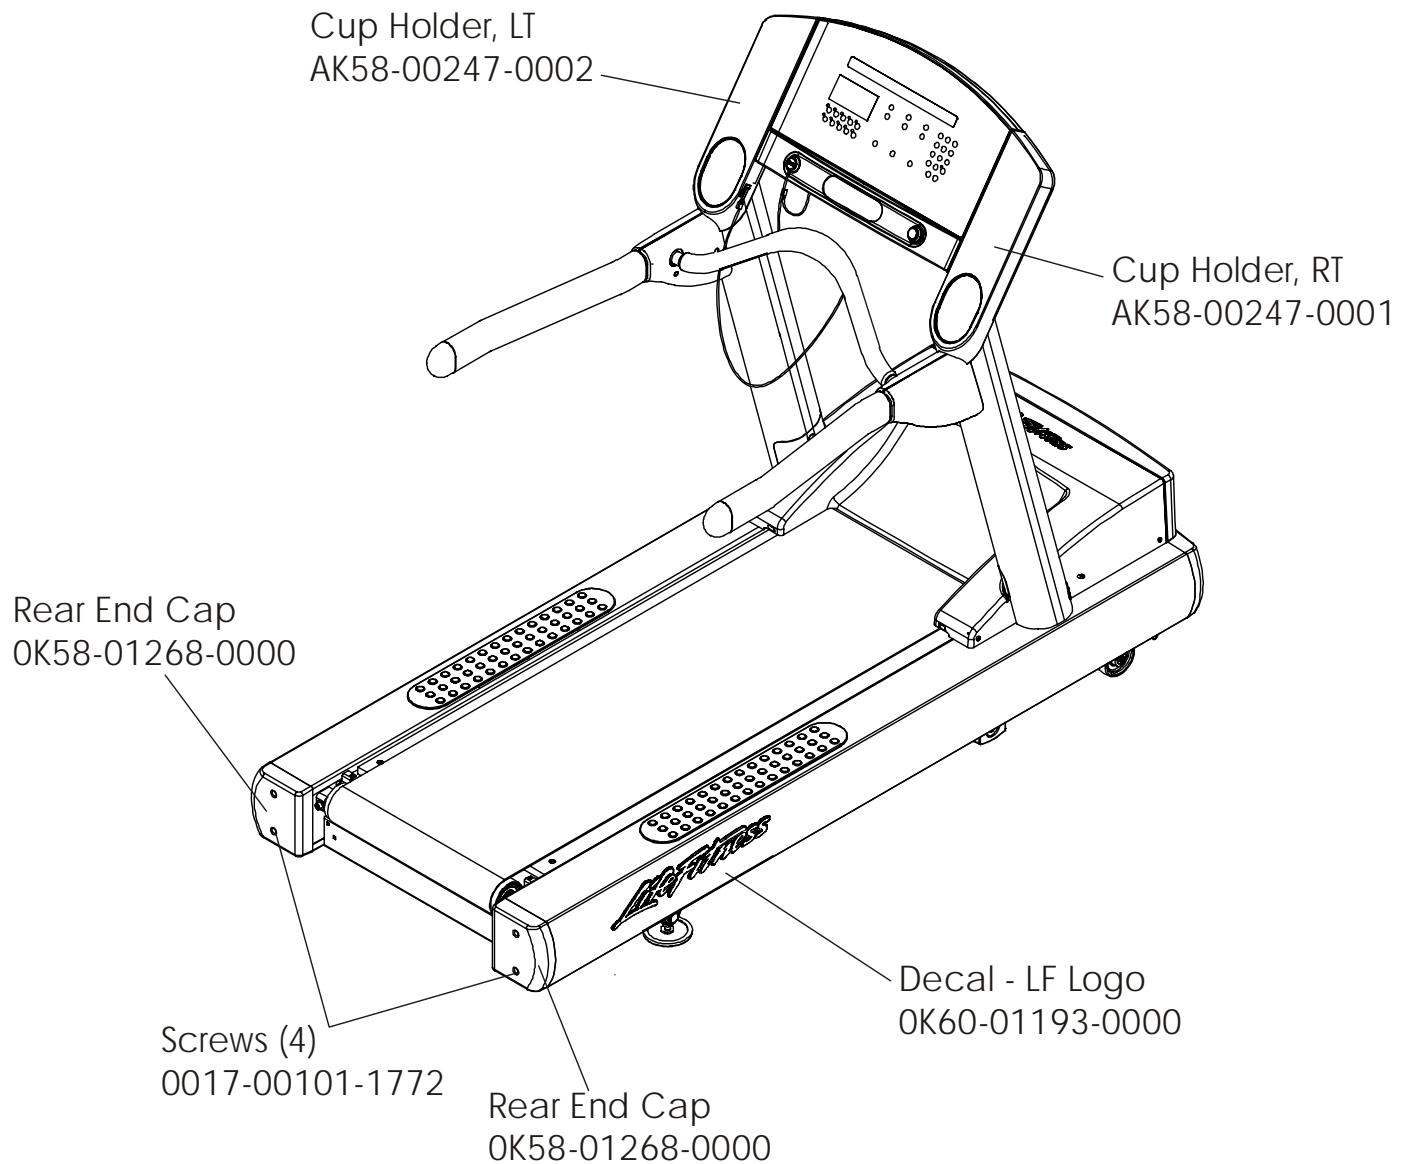


ARCTIC SILVER 95TW

95TW-0XXX-03


Scuff Pad, Tinsel and Frame Tag Bd.

S/N WTE100000 and up

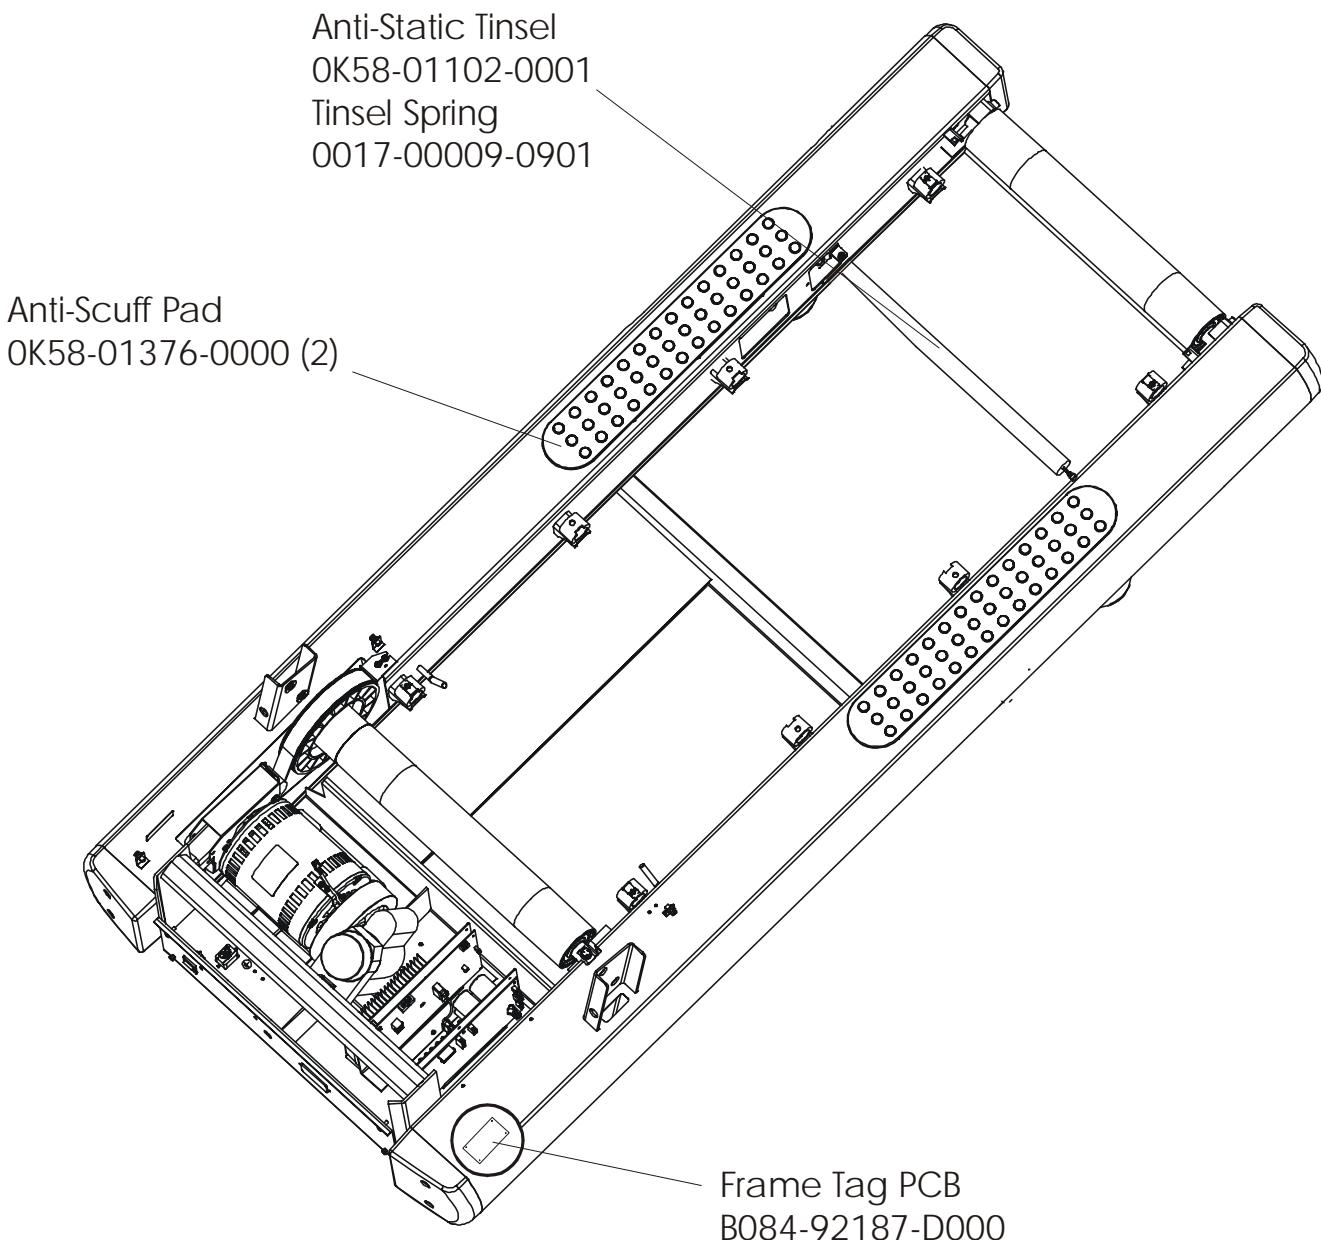



ARCTIC SILVER 95TW
Console and Related Components

95TW-0XXX-03
S/N WTE100000 and up

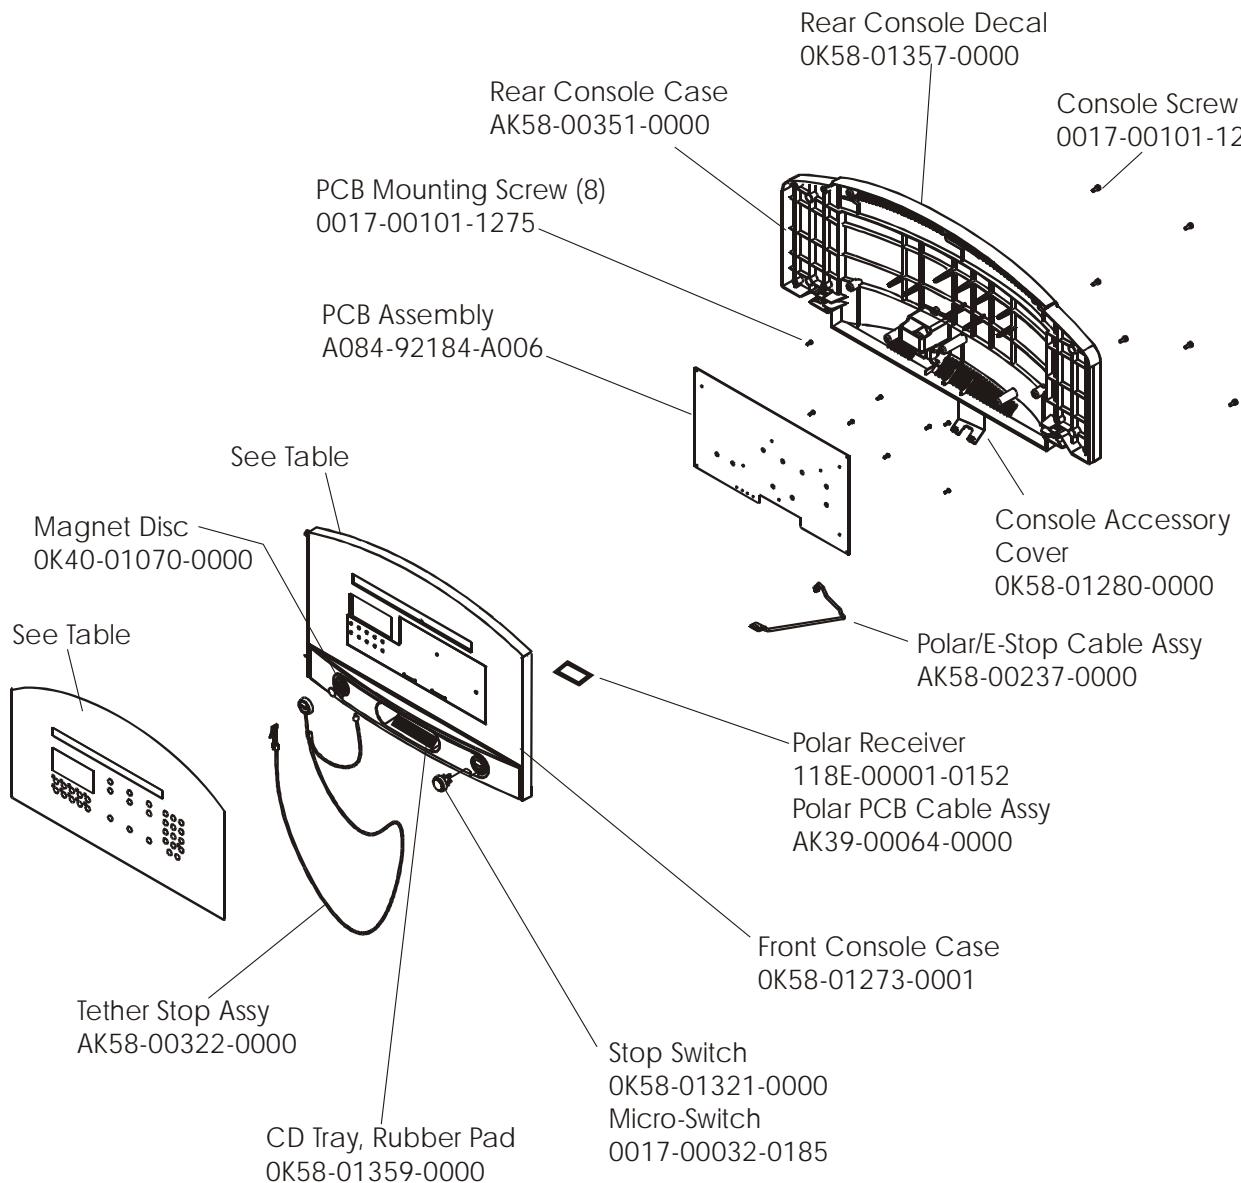



| Console Assembly | Overlay/Bezel/Switch Assy. | Overlay | Language |
|------------------|----------------------------|-----------------|------------|
| AK58-00438-0001 | AK58-00203-0001 | OK58-01298-0001 | Eng/Met |
| AK58-00438-0002 | AK58-00203-0001 | OK58-01298-0001 | Eng/Eur |
| AK58-00438-0003 | AK58-00203-0003 | OK58-01298-0003 | German |
| AK58-00438-0004 | AK58-00203-0004 | OK58-01298-0004 | Spanish |
| AK58-00438-0006 | AK58-00203-0006 | OK58-01298-0006 | Japanese |
| AK58-00438-0007 | AK58-00203-0007 | OK58-01298-0007 | French |
| AK58-00438-0008 | AK58-00203-0008 | OK58-01298-0008 | Italian |
| AK58-00438-0009 | AK58-00203-0009 | OK58-01298-0009 | Dutch |
| AK58-00438-0010 | AK58-00203-0010 | OK58-01298-0010 | Portuguese |


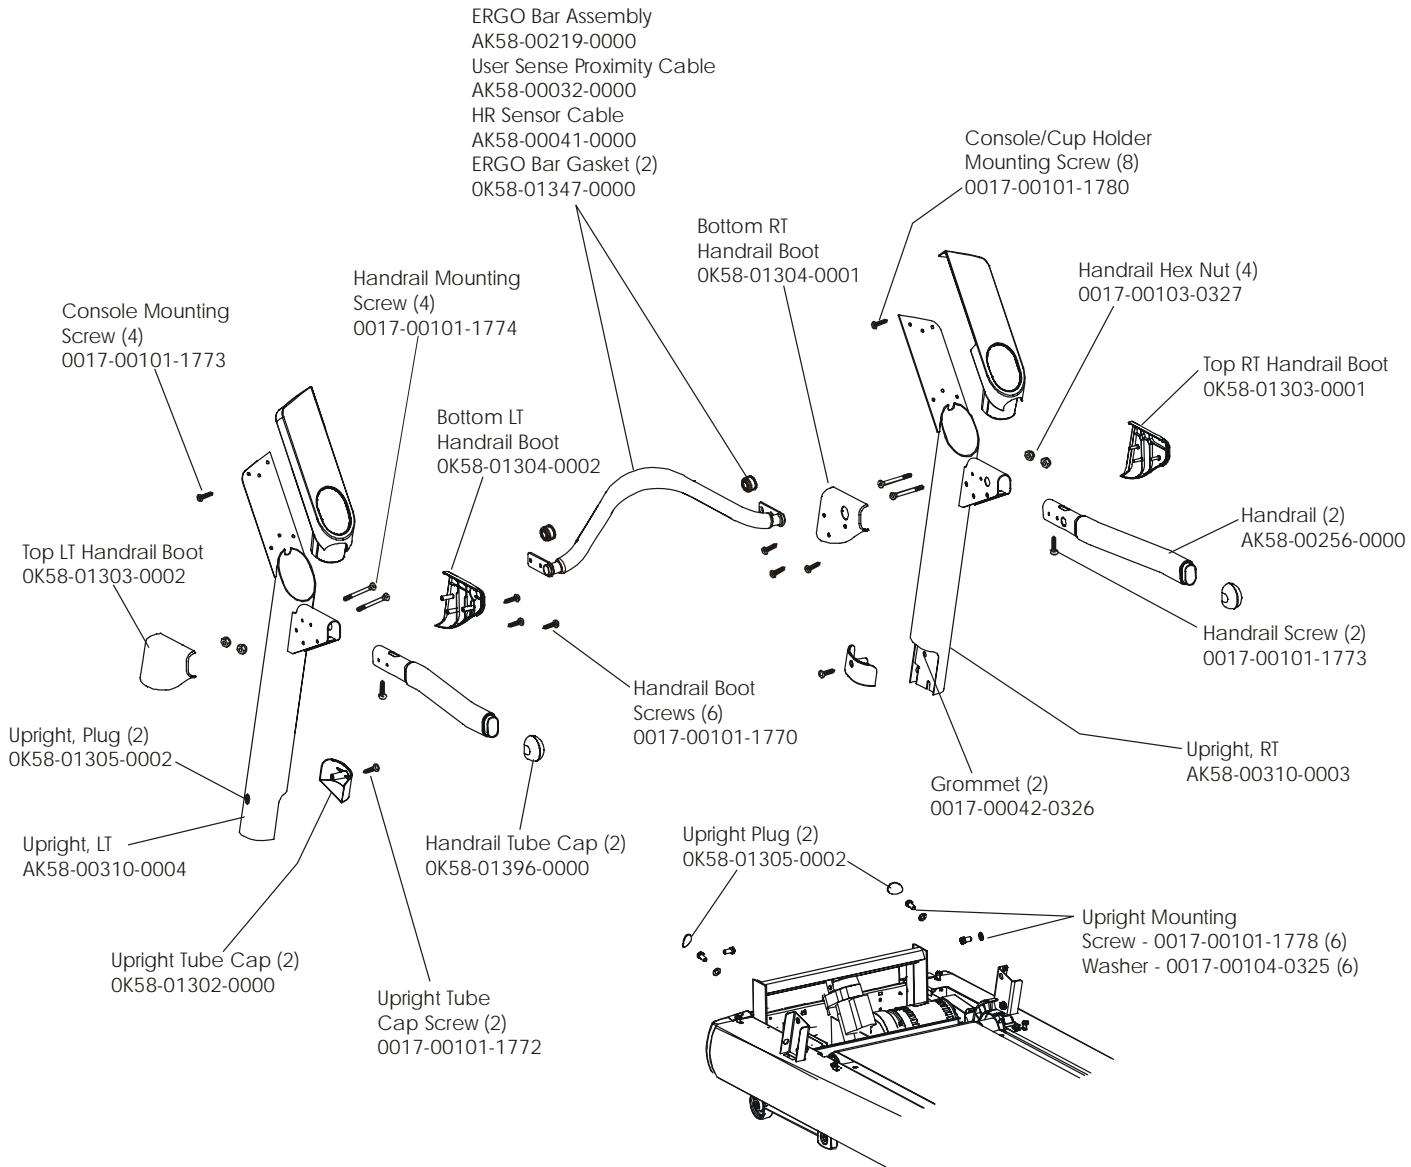


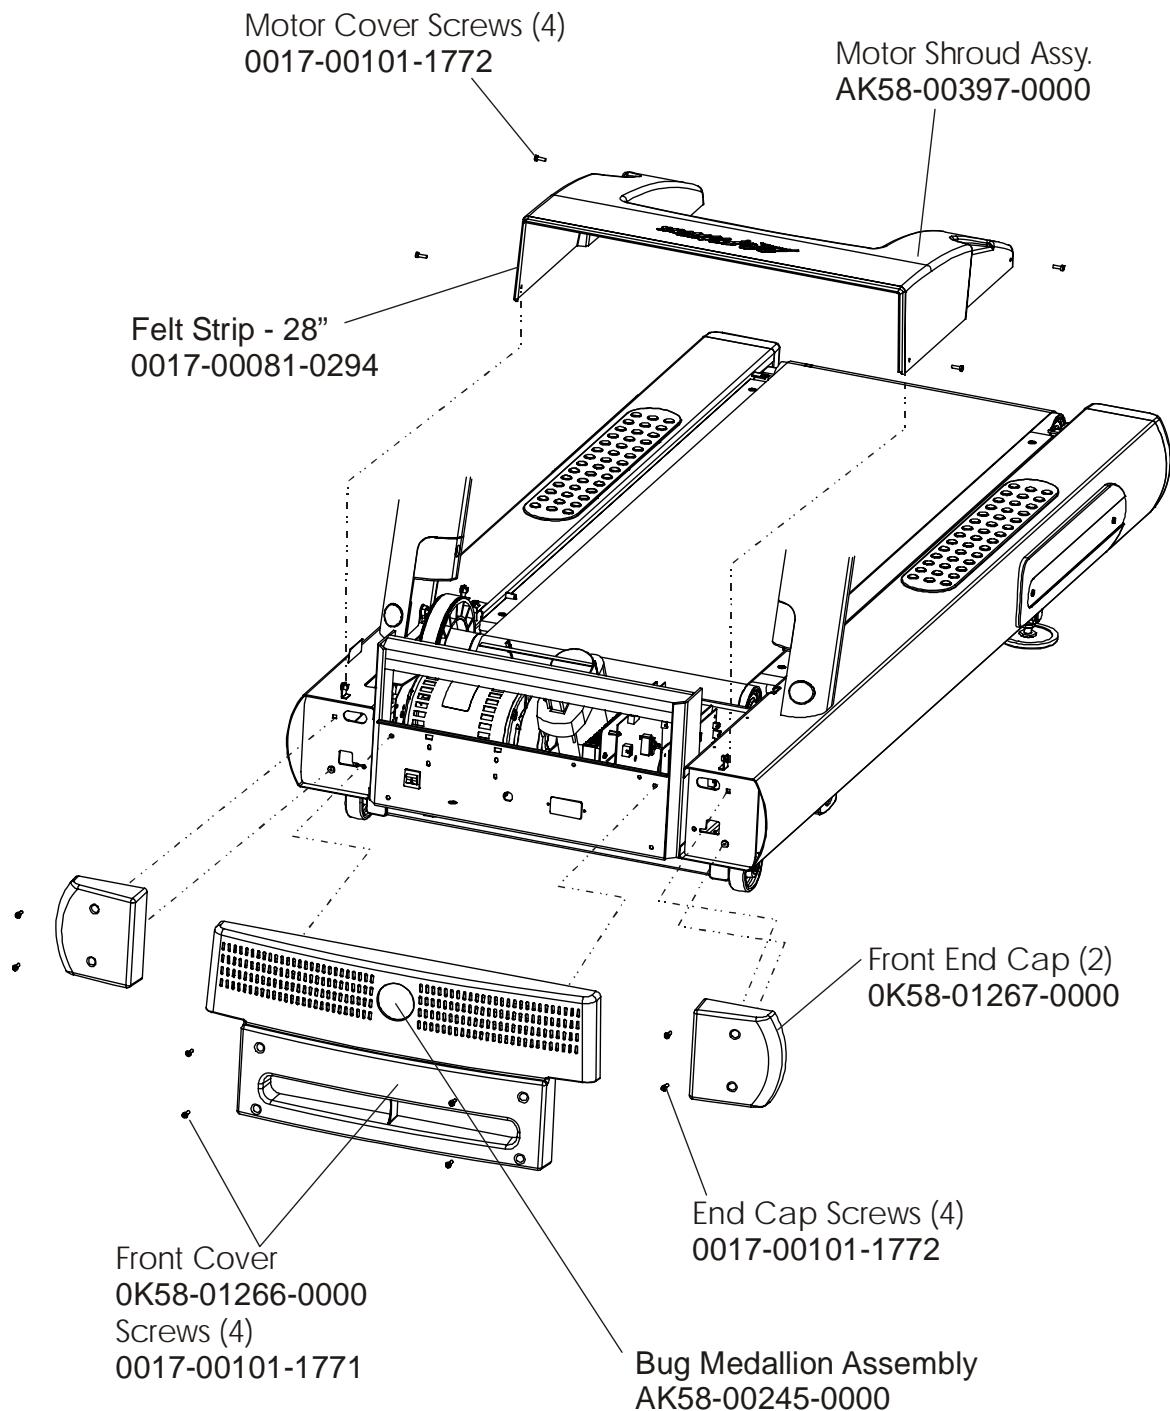
ARCTIC SILVER 95TW**95TW-0XXX-03****Motor Cover, Front Cover and Front
End Caps****S/N WTE100000 and up**

ARCTIC SILVER 95TW
Belt, Deck and Rear Roller


95TW-0XXX-03
S/N WTE100000 and up

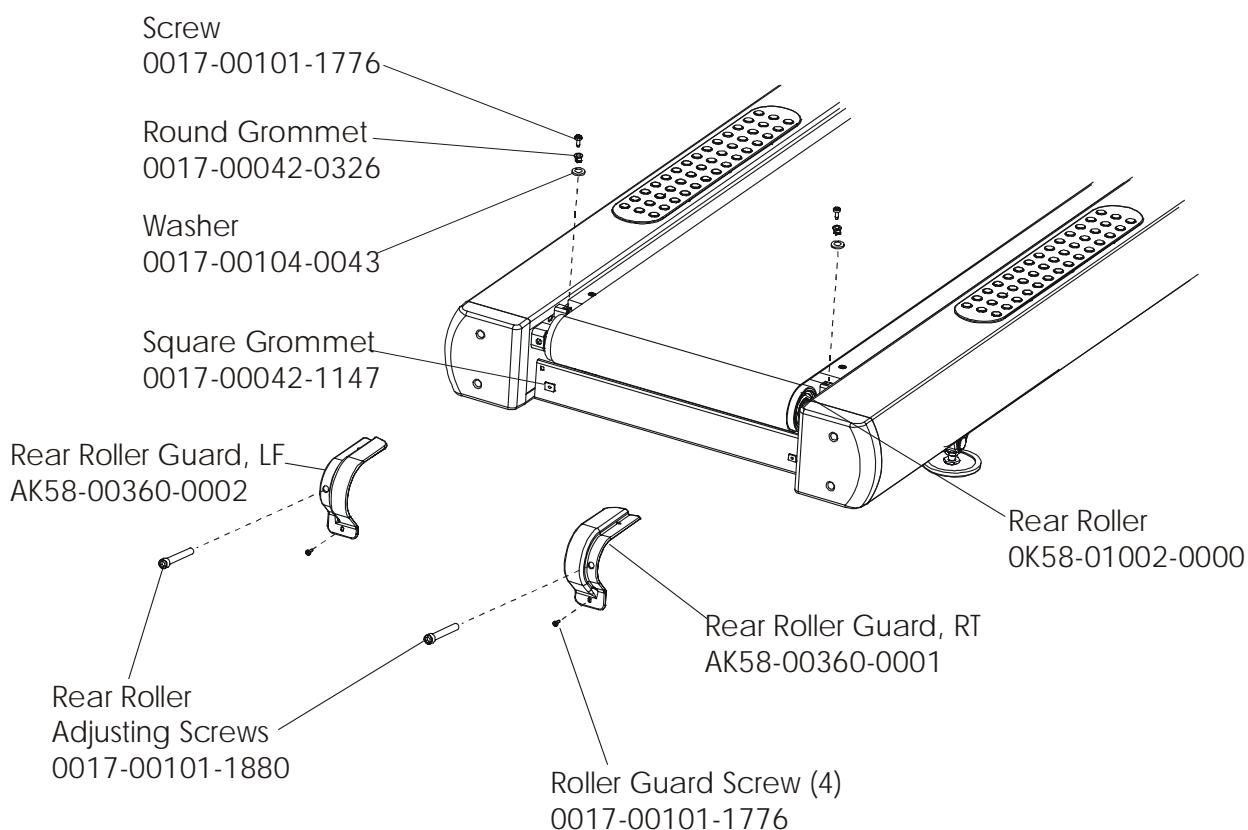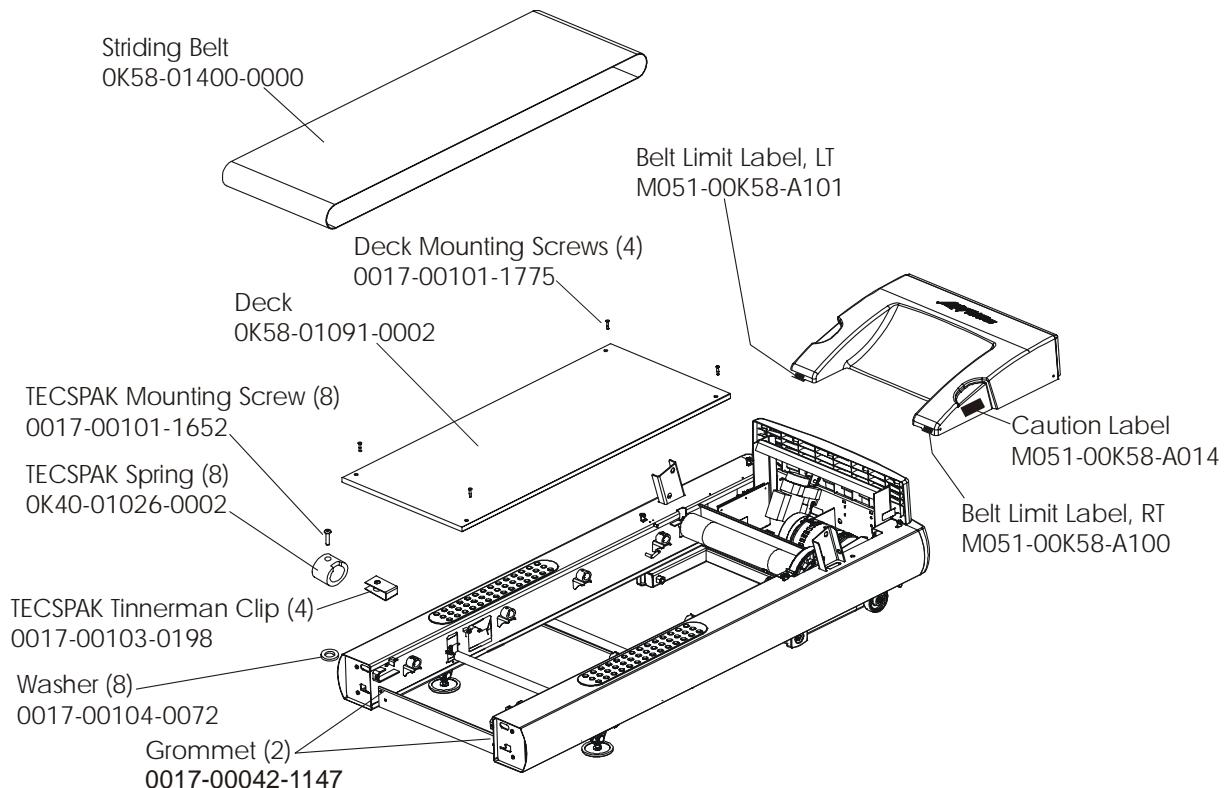

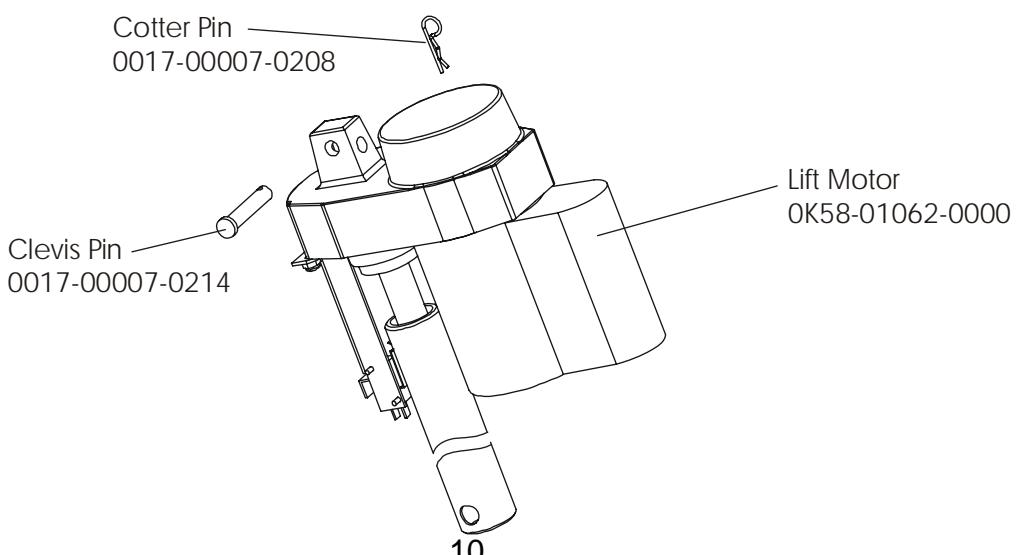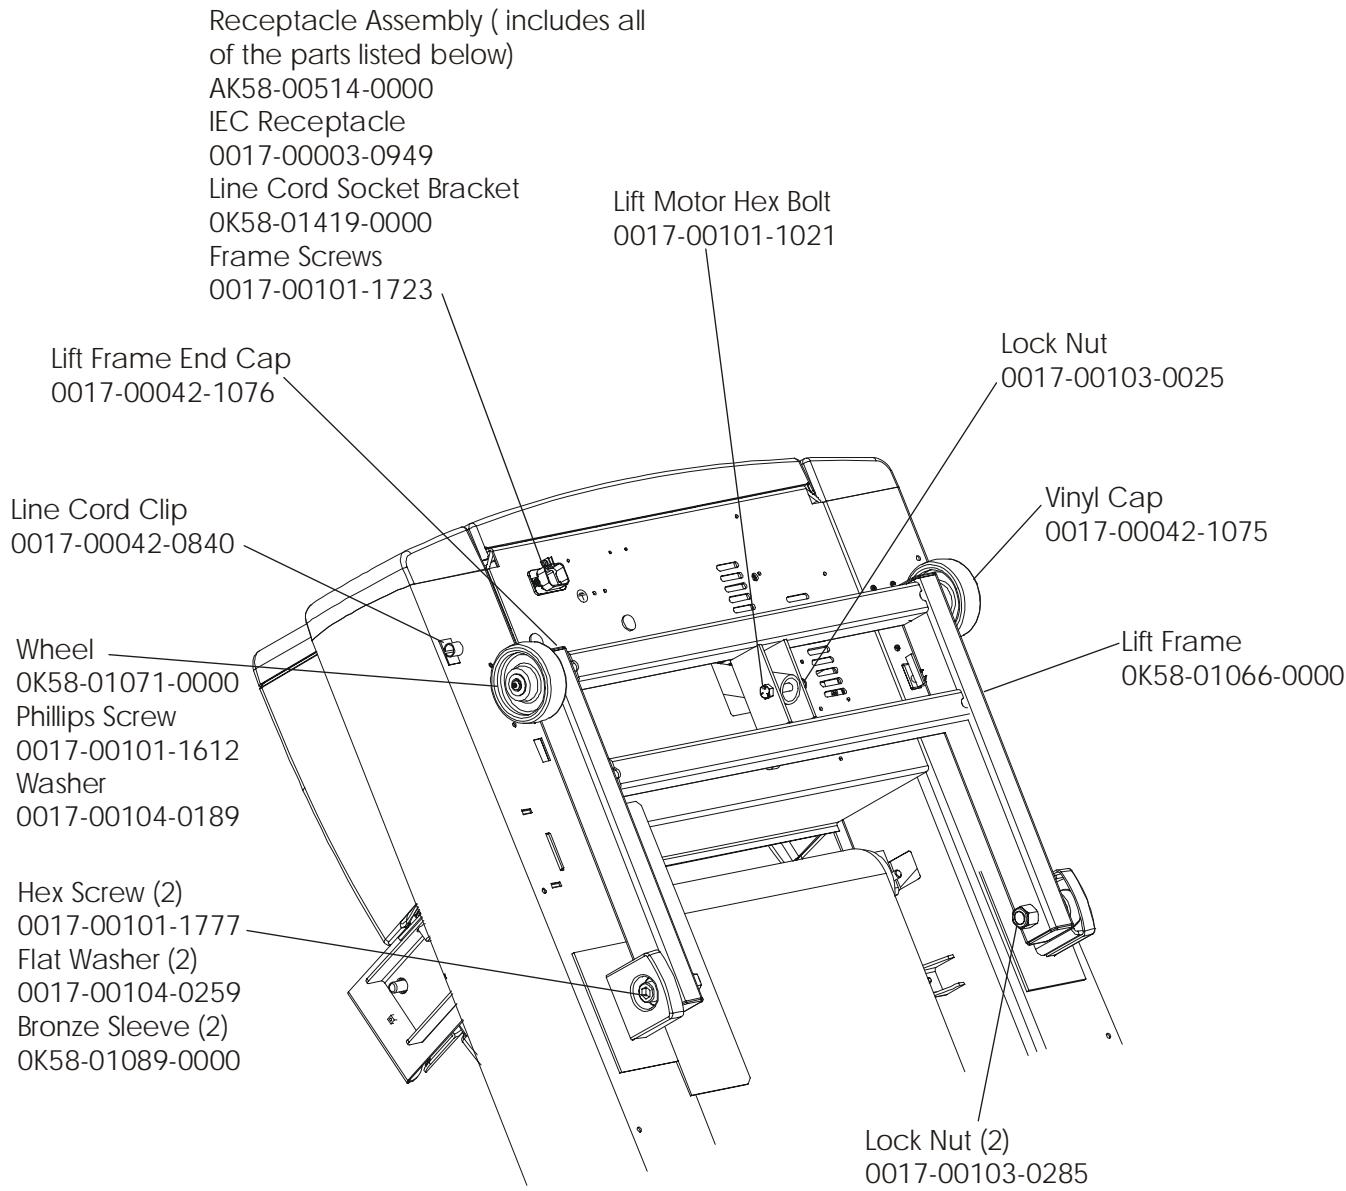

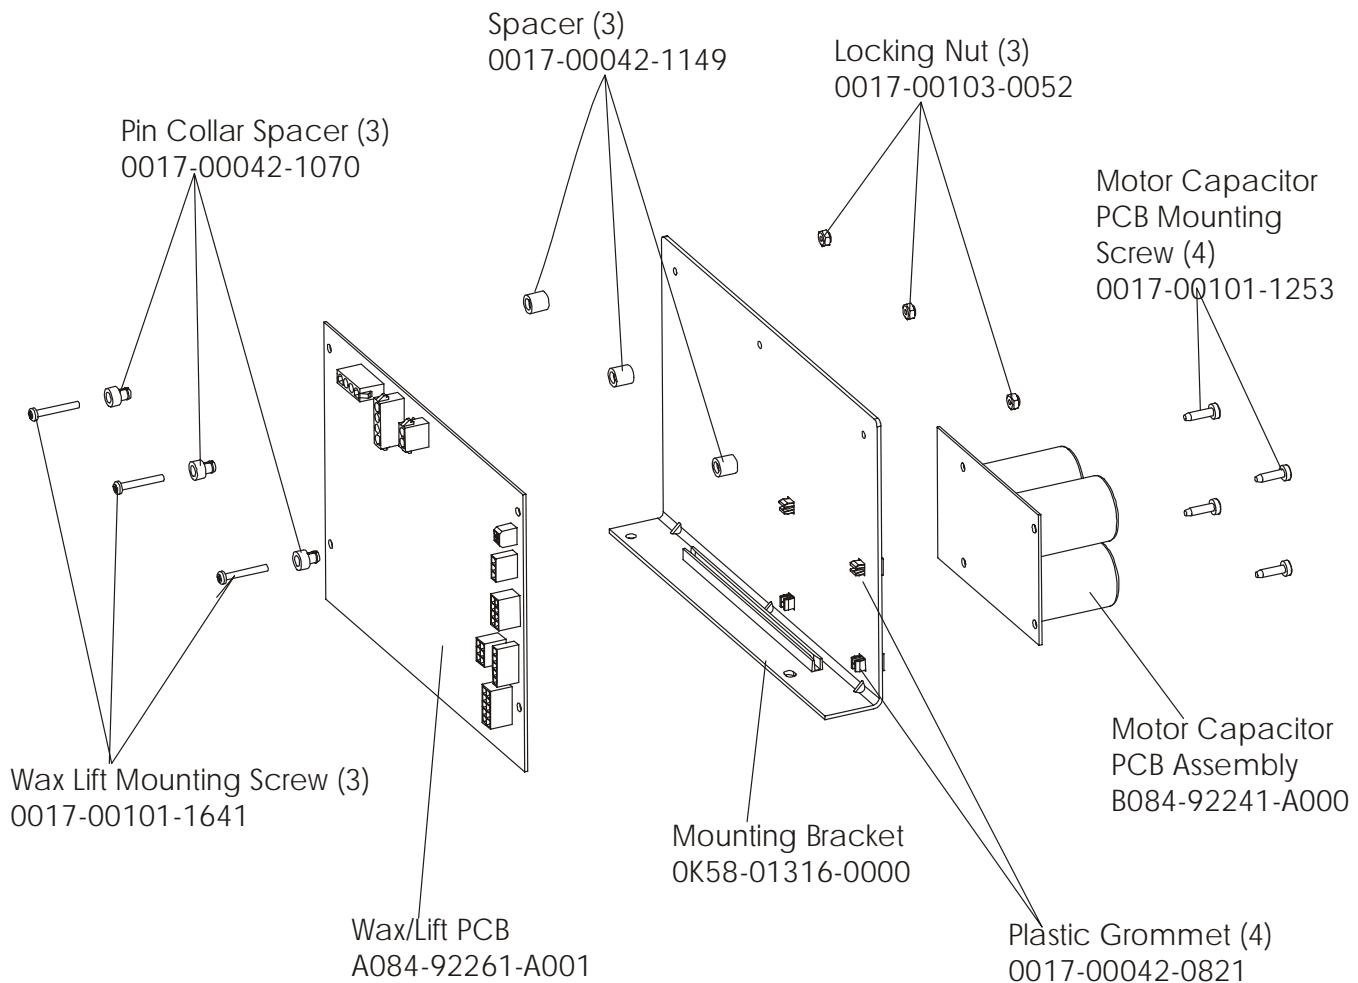


AK60-00171-0000 (100-120v) W/O FERRITE
AK60-00171-0001 (200-240v) W/O FERRITE
AK60-00171-0002 (100-120v) WITH FERRITE
AK60-00171-0003 (200-240v) WITH FERRITE

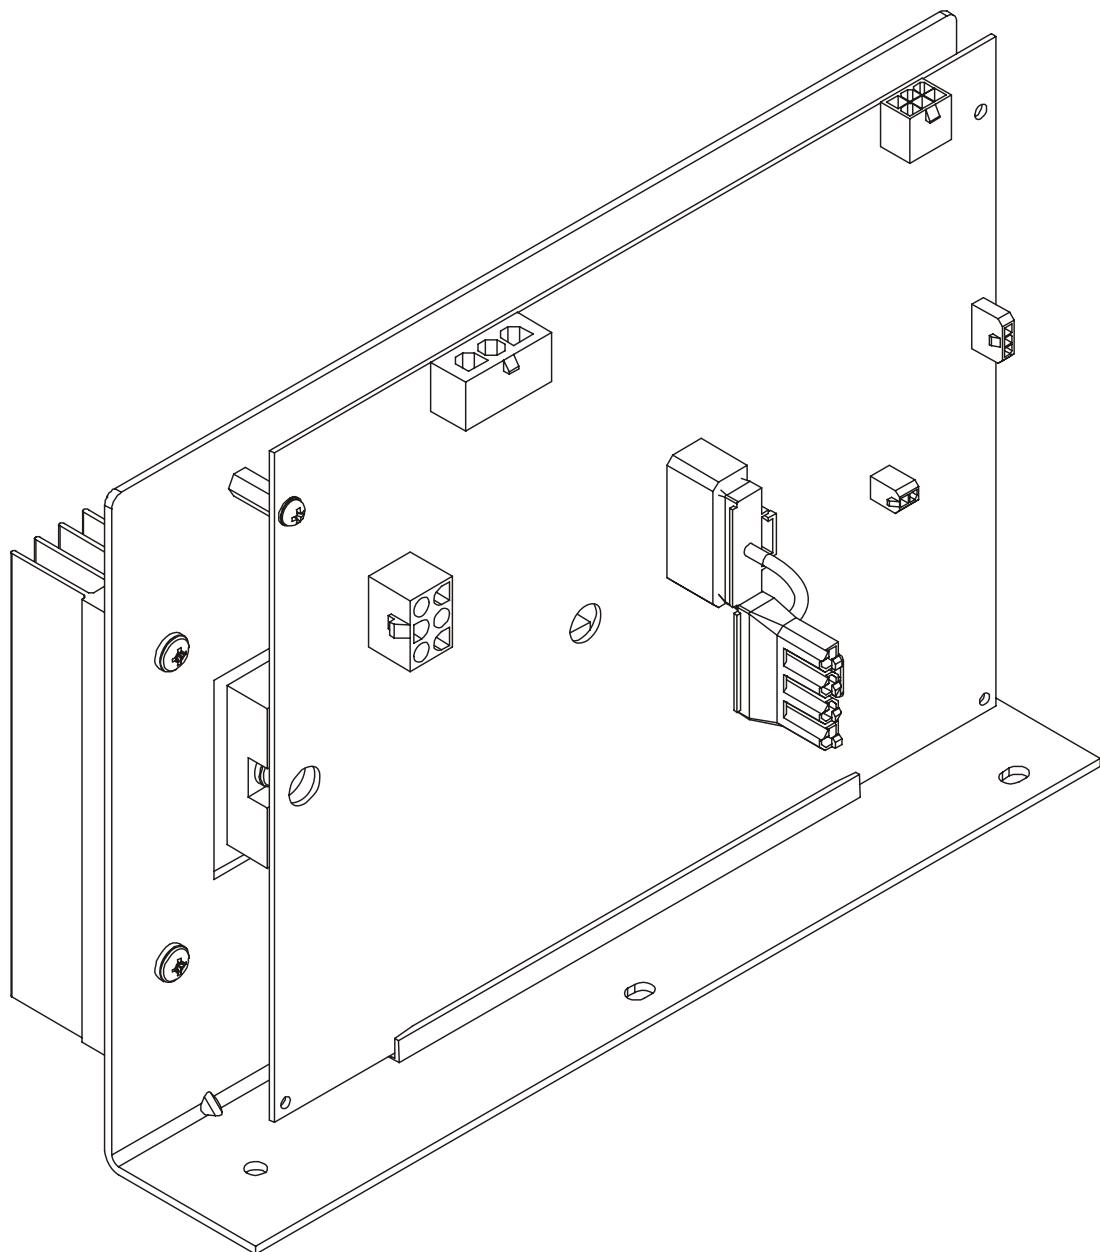



ARCTIC SILVER 95TW
Drive Motor Assembly

95TW-0XXX-03
S/N WTE100000 and up

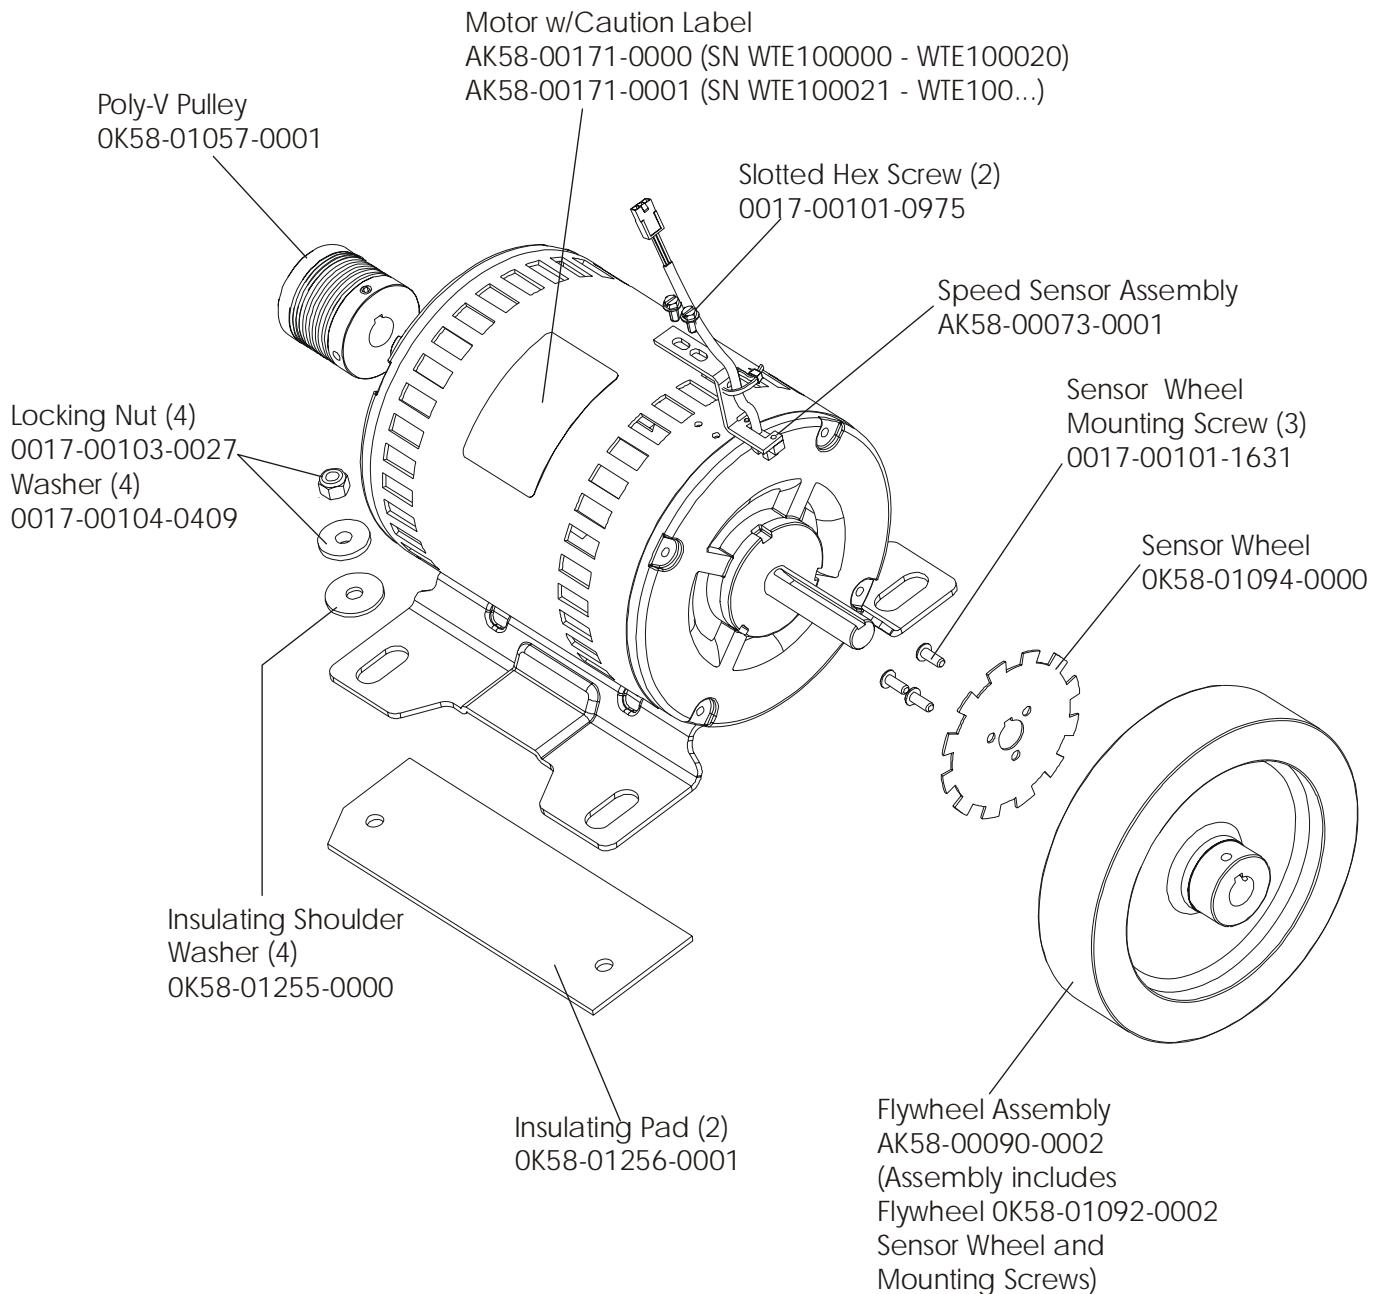


| Drive Motor Assembly Number | Motor Serial Number |
|-----------------------------|-----------------------|
| AK58-00172-0000 | WTE100000 – WTE100020 |
| AK58-00172-0002 | WTE100021 and up |

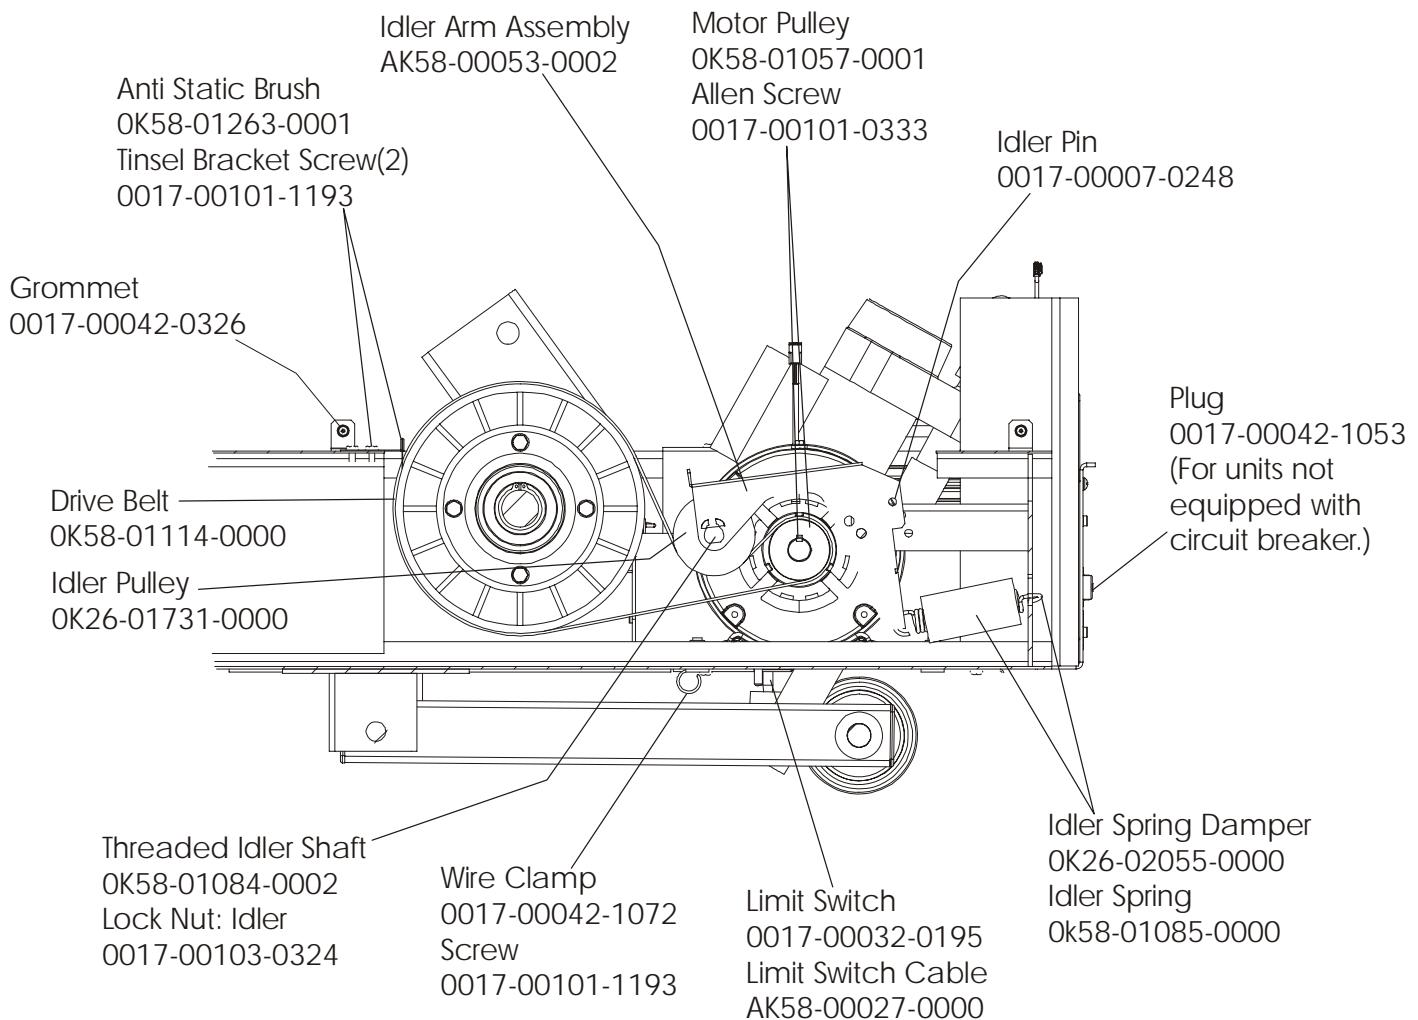


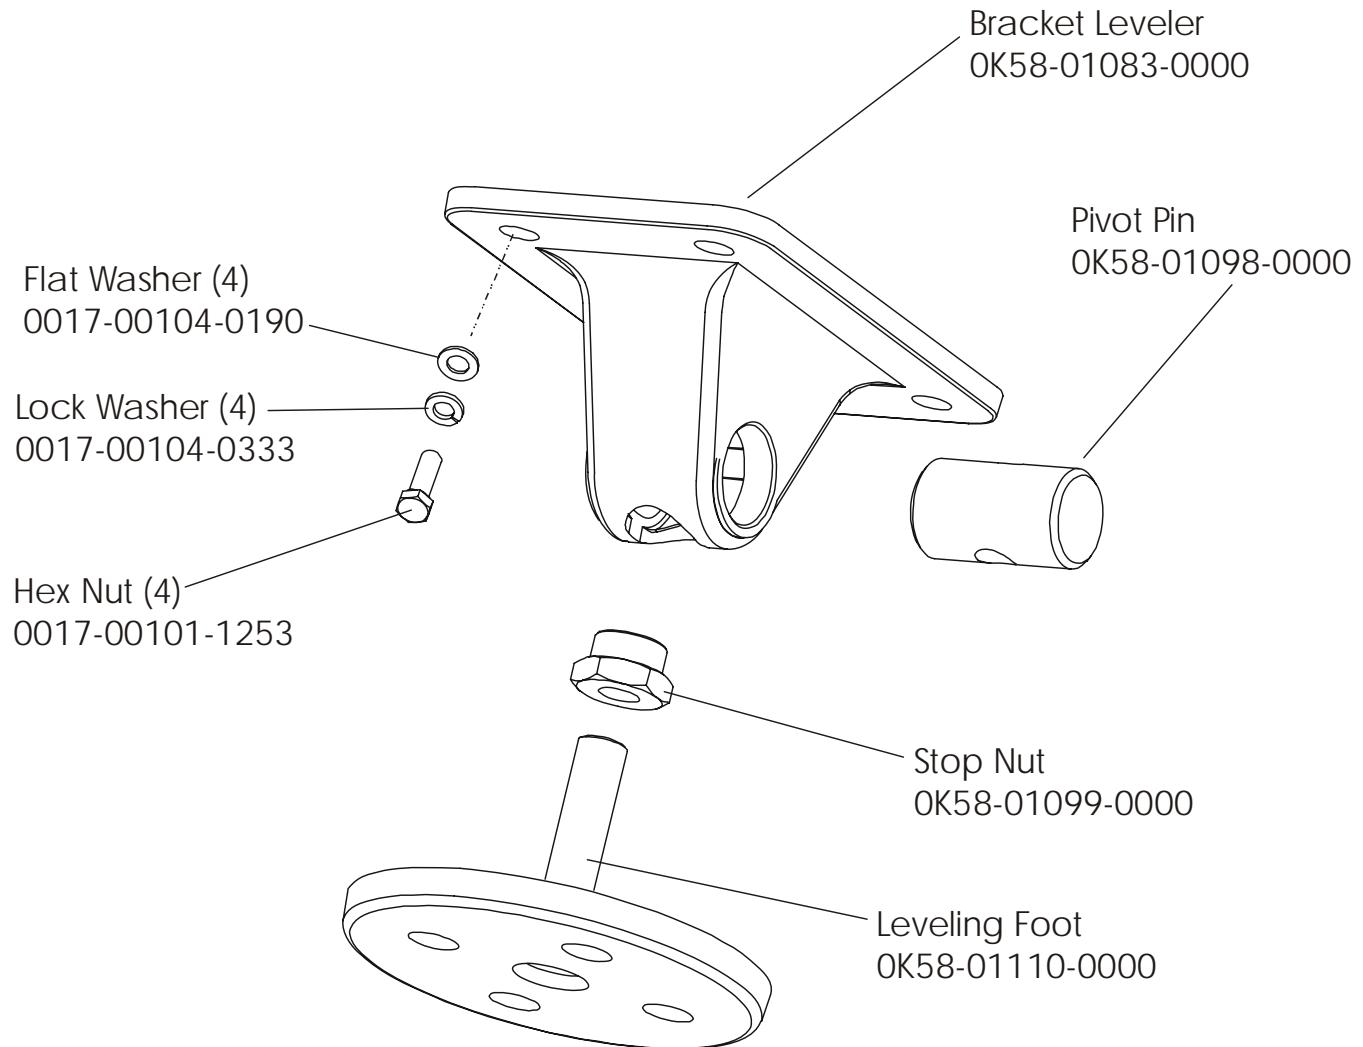

ARCTIC SILVER 95TW
Front Roller Assy.-AK58-00066-0000

95TW-0XXX-03
S/N WTE100000 and up

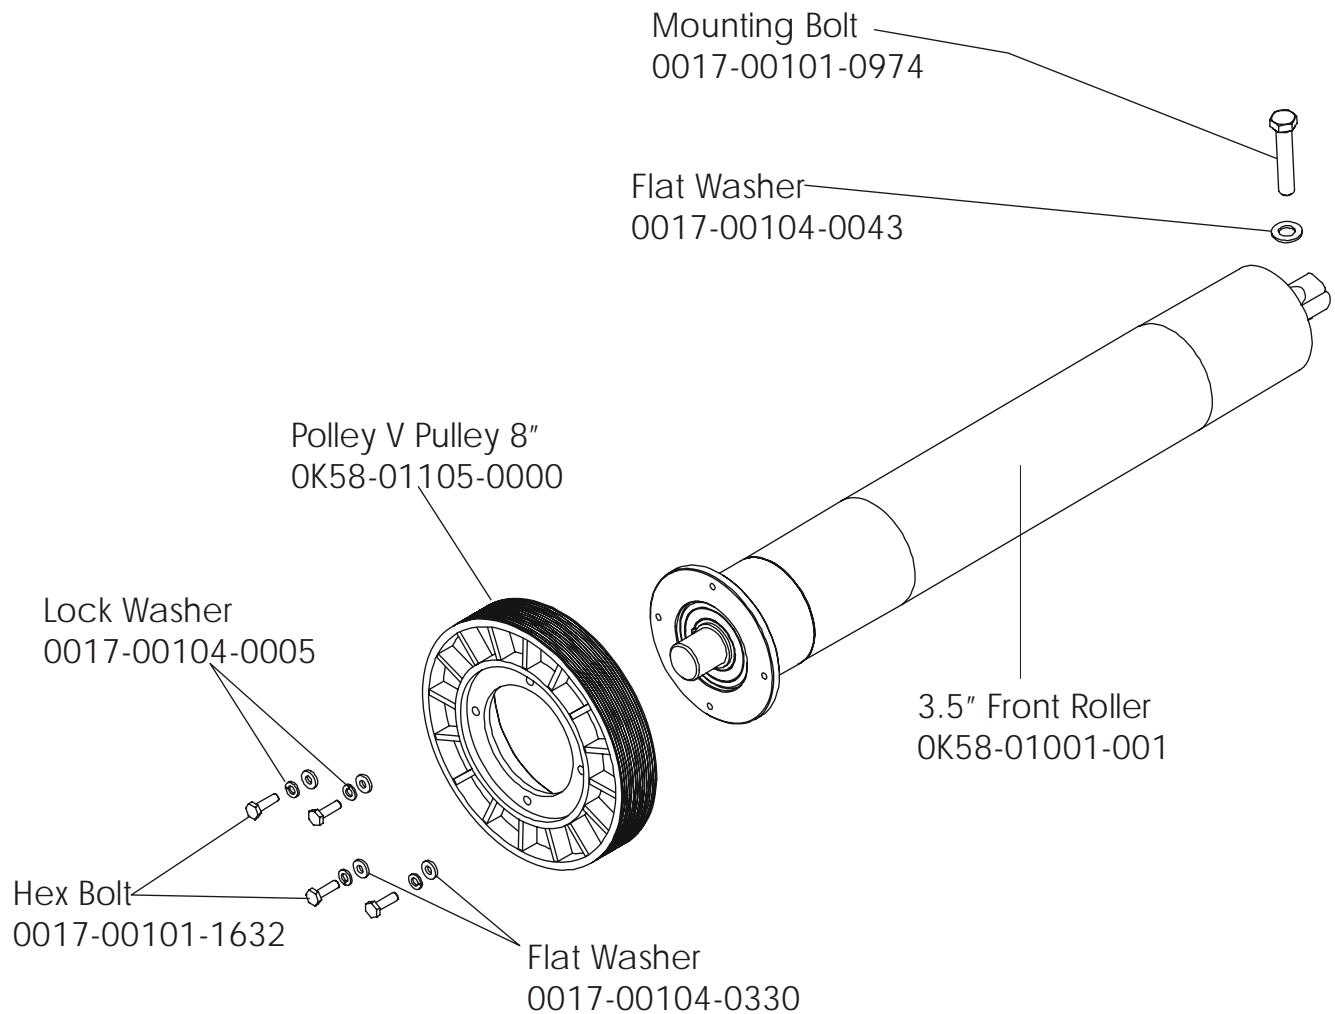

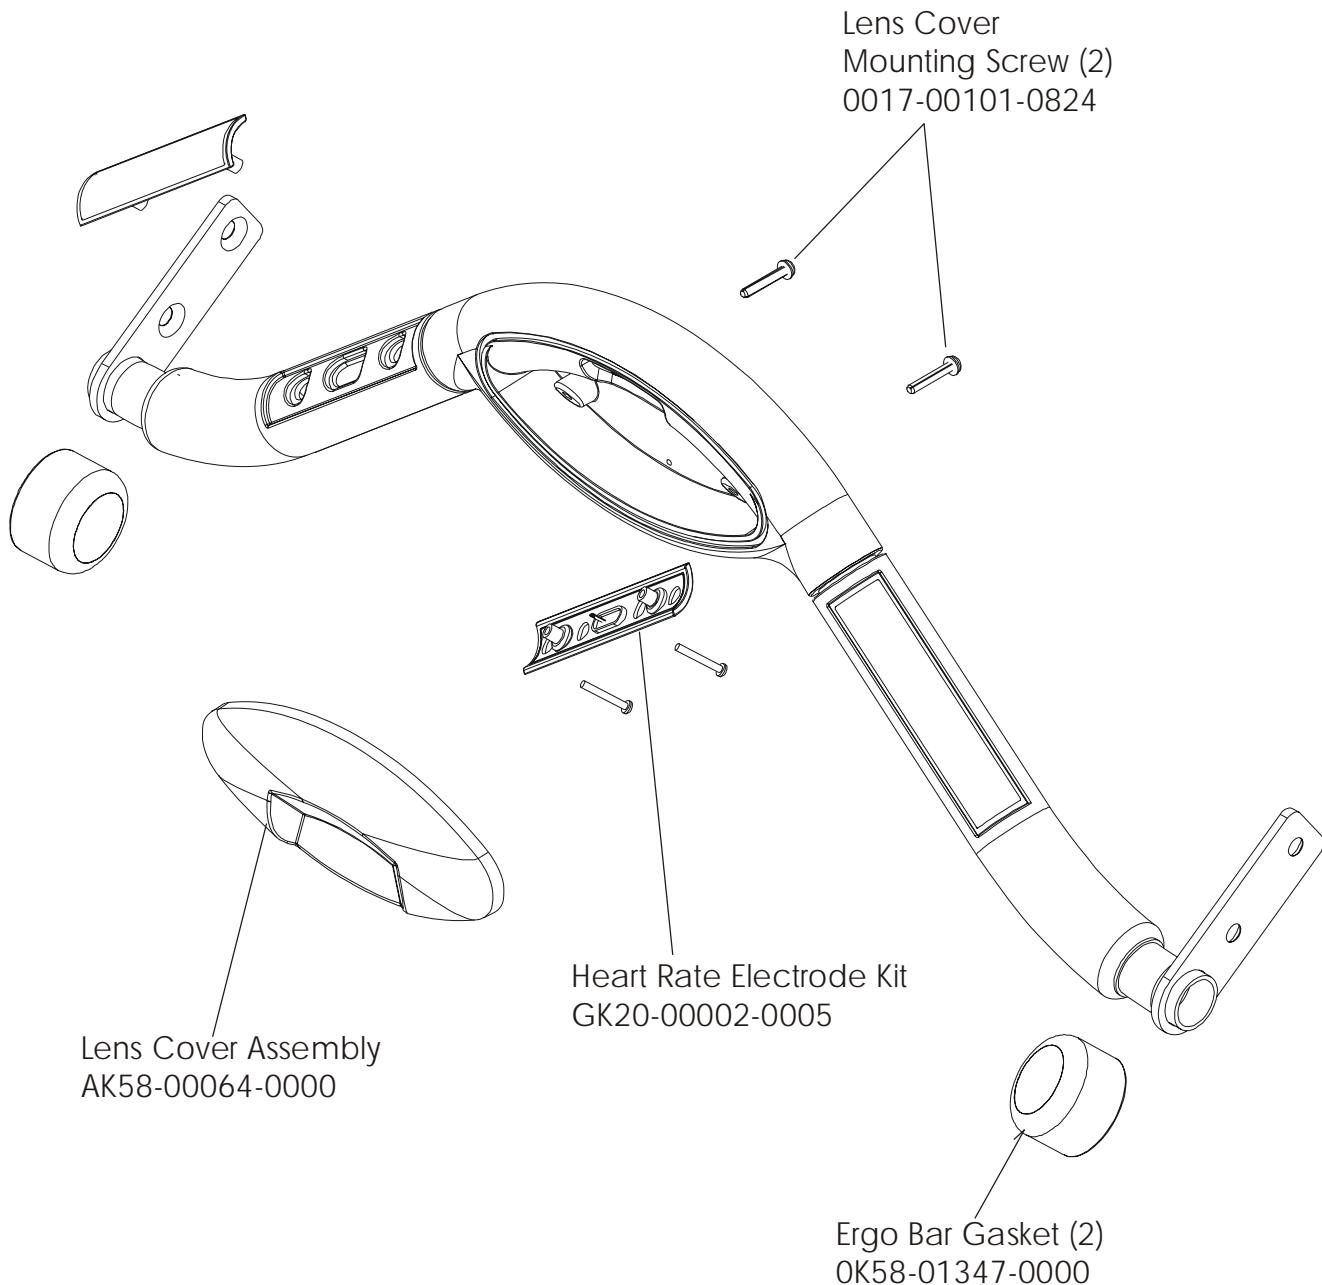



ARCTIC SILVER 95TW

95TW-0XXX-03

Power Components Schematic 1

S/N WTE100000 and up

Line Cord (Plug End Changes)
0017-00003-0947 12' 120v
*0017-00003-0974 Domestic
0017-00003-0948 12' 220v
0017-00003-0915 RT Angle Plug
0017-00003-0781 220v/60Hz
0017-00003-0696 Continental
0017-00003-0890 240v/59Hz
0017-00003-0996 240v+ AUS
* standard cord for domestic unit

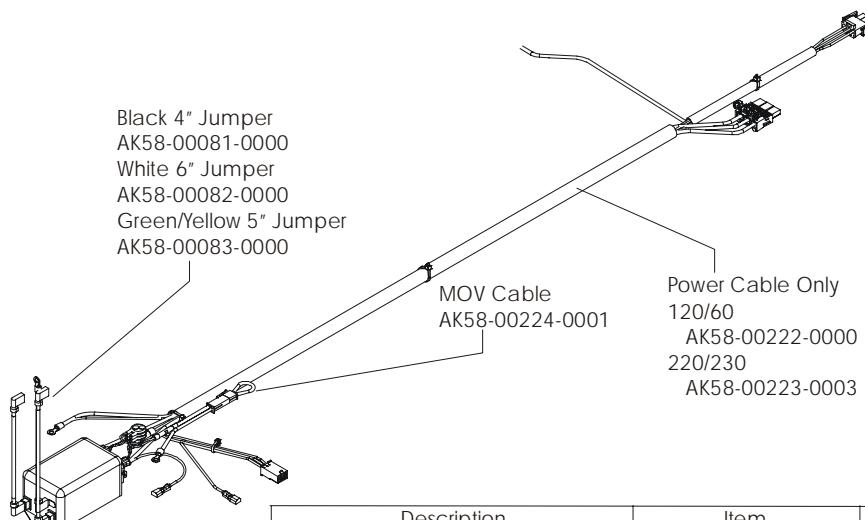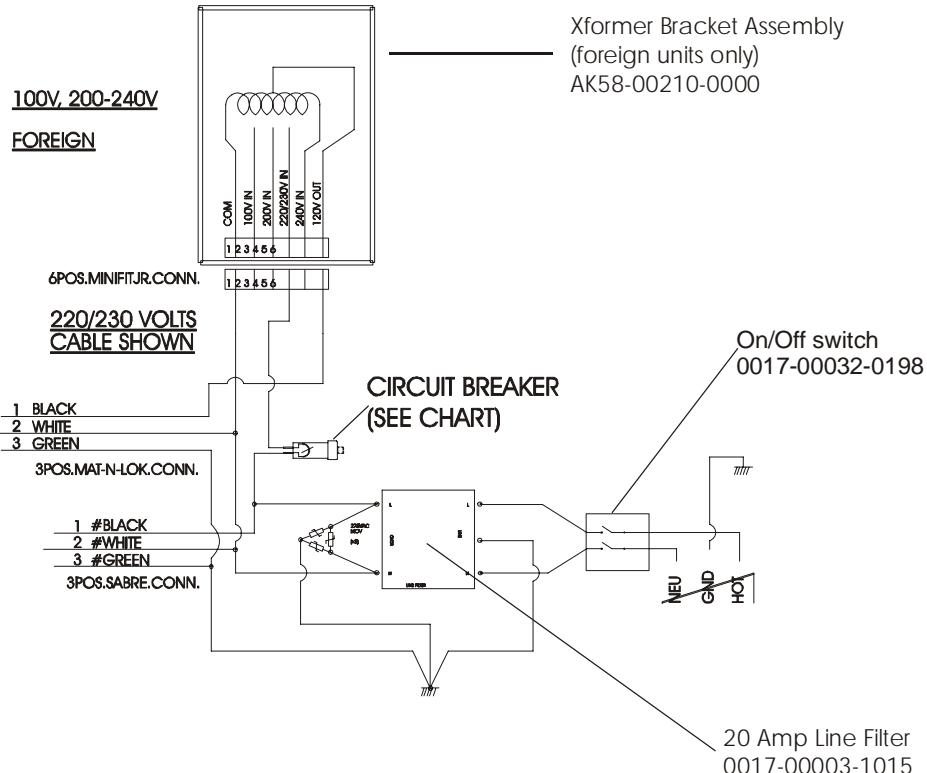

| Description | Item | Item | Item |
|-------------------------------|-----------------|-----------------|-----------------|
| HARNESS-ASSY:MFG:120/60 20A E | 0017-00003-1015 | AK58-00222-0000 | AK32-00265-0001 |
| HARNESS-ASSY:MFG:220/60 20A E | 0017-00003-1015 | AK58-00223-0003 | AK32-00265-0002 |
| HARNESS-ASSY:MFG:230/50 10A E | - | AK58-00223-0003 | AK32-00265-0003 |
| HARNESS-ASSY:MFG:240/50 10A E | - | AK58-00223-0004 | AK32-00265-0004 |
| HARNESS-ASSY:MFG:240V+ 20A E | 0017-00003-1015 | AK58-00223-0004 | AK32-00265-0005 |
| HARNESS-ASSY:MFG:100/50 20A E | 0017-00003-1015 | AK58-00223-0001 | AK32-00265-0006 |
| HARNESS-ASSY:MFG:200/50 20A E | 0017-00003-1015 | AK58-00223-0002 | AK32-00265-0007 |



ARCTIC SILVER 95TW

Power Components Schematic 2

95TW-0XXX-03

S/N WTE100000 and up

120V DOMESTIC
ONLY

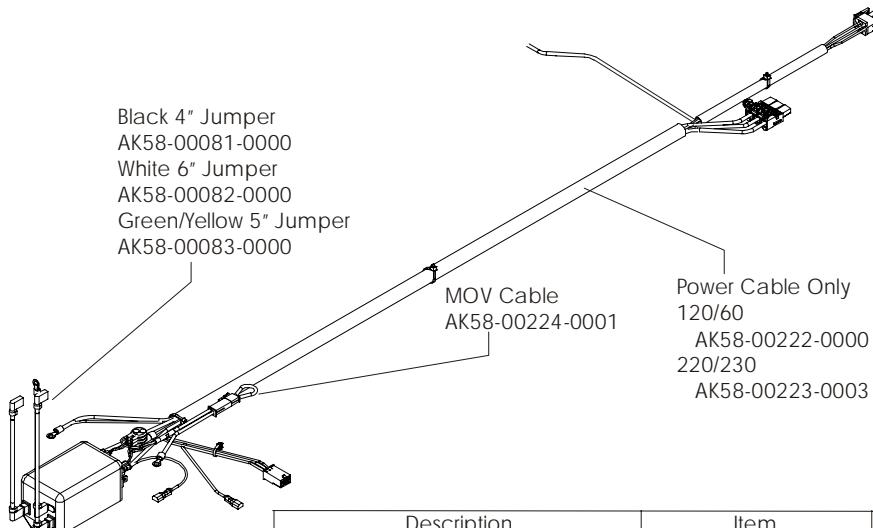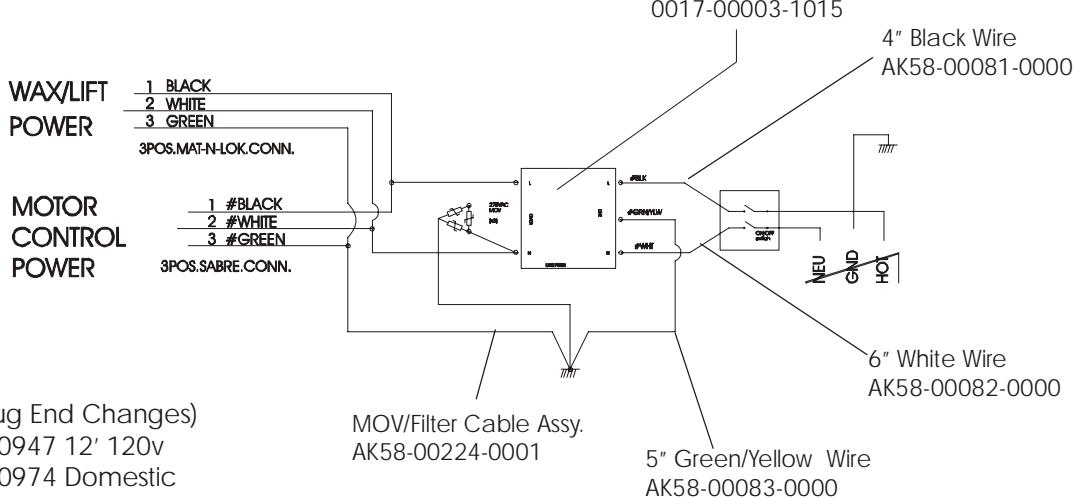

| Description | Item | Item | Item |
|-------------------------------|-----------------|-----------------|-----------------|
| HARNESS-ASSY:MFG;120/60 20A E | 0017-00003-1015 | AK58-00222-0000 | AK32-00265-0001 |
| HARNESS-ASSY:MFG;220/60 20A E | 0017-00003-1015 | AK58-00223-0003 | AK32-00265-0002 |
| HARNESS-ASSY:MFG;230/50 10A E | - | AK58-00223-0003 | AK32-00265-0003 |
| HARNESS-ASSY:MFG;240/50 10A E | - | AK58-00223-0004 | AK32-00265-0004 |
| HARNESS-ASSY:MFG;240V+ 20A E | 0017-00003-1015 | AK58-00223-0004 | AK32-00265-0005 |
| HARNESS-ASSY:MFG;100/50 20A E | 0017-00003-1015 | AK58-00223-0001 | AK32-00265-0006 |
| HARNESS-ASSY:MFG;200/50 20A E | 0017-00003-1015 | AK58-00223-0002 | AK32-00265-0007 |

For pre-wired units:
 120" Coax Cable
 AK32-00020-0002
 120" Power Extension Cable
 AK32-00078-0001

